

# EXPANSION TERMINAL INSTALLATION INSTRUCTIONS

## CHART INSTRUCTIONS

1. Locate bus temperature at bottom of chart
2. Using the diagonal line for maximum bus length of 140ft. find the appropriate dimension "X".
3. The chart may only be used for bus lengths less than 140ft.

