

NO RING EXPANSION TERMINAL INSTALLATION INSTRUCTIONS

CHART INSTRUCTIONS

1. Locate bus temperature at bottom of chart.
2. Using the diagonal line for maximum bus length of 120ft. find the appropriate dimension "X".
3. The chart may only be used for bus lengths less than 120ft.

